 


ECO KITCHEN

Technical Data Sheet





Ecological product, designed for degreasing all kinds of water-proof surfaces and accessories.

Doesn't contain hazardous substances. Effectively removes greasy contaminations of galenic and animal origin. Product is biodegradable.

APPLICATION:

- tiles, walls, floors, gastronomic devices
- stoves, cupboards, shelves, tables

COMPOSITION:

- < 5% non-ionic surfactants
- alcohols
- aroma composition
- auxiliary substances not classified as dangerous

USAGE:

Use without diluting.

Spray the surface, brush it and wash it down with clean water.

In case of strong contaminations, leave it for 5-15 minutes before washing.

tel. +48 91 311 97 77 fax. +48 91 311 97 79

E-mail: info@tenzi.pl, www.tenzi.pl



ECO KITCHEN

Technical Data Sheet

DANGER:



- Causes serious eye irritation.
- IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.

SELL-BY DATE:

36 months from the production date.

Production date/series and expiration date are stated on the packaging.

ADDITIONAL INFORMATION:

Additional information can be found in safety data sheet.

Contaminated containers should be completely emptied. Several times rinse the container promptly after emptying. Empty container can be stored in containers for collection of plastic packaging, or can be delivered to specialized company for recycling.

Disposal should be in accordance with the national/international regulations

tel. +48 91 311 97 77 fax. +48 91 311 97 79

E-mail: info@tenzi.pl, www.tenzi.pl